

Changing The Lids On Your Vacuum Beverage Servers

Step 1

Open the lid and locate the screw in front of the stopper.



Step 2

Using a #1 Phillips-Head screwdriver, un-screw and remove the original stopper.



Step 3

Place the new stopper into the collar & screw into place. Dispose of the old lid.

