


Cleaning the Inner Glass of the Oven Door

FC-33, FC-33/1, FC-34 & FC-34/1

1. Unplug the oven from the outlet and open the door to its maximum position.
2. Remove the screw in each bracket at the bottom of the inside glass, and then remove the brackets.

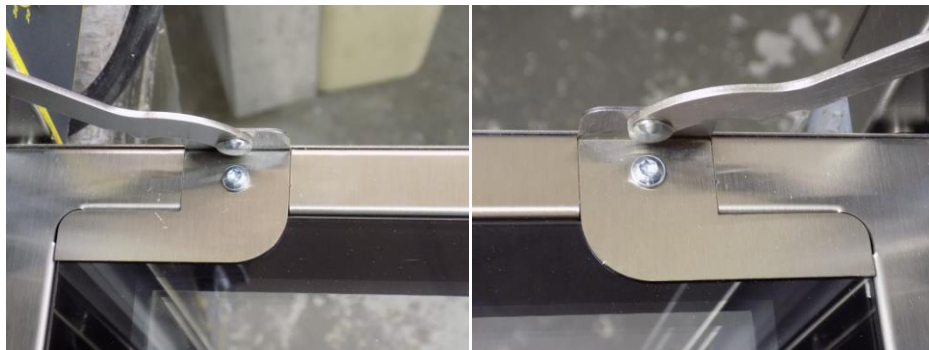

3. Remove the inner glass by lifting the bottom of the glass panel upwards slightly, enough to clear the frame, then slide it towards the unit to remove the top of the glass from the steel retaining tabs at the top of the door. **Warning: Once the glass is removed, the weight of the door will no longer be enough to keep the door open. Be sure it does not slam the door and damage the front glass.**
4. Gently close the door and then take the inner glass to a pot sink and **carefully** clean thoroughly.
5. The outer glass is bonded to the frame and is not removable. Clean the outer glass as desired in place.
6. Reassemble the door reversing the procedure of the disassembly instructions.