


## *Heat Lamp Installation Instructions*

### **Preparing the Unit**

1. Unpack unit from the cartons and confirm that all pieces are present.  
Units available are: 2791 Single – Light Heat Lamp  
2792 Double – Light Heat Lamp  
2793 Double – Light Heat Lamp with Marble Carving Station
2. Install a 250 watt maximum, R-40, Type ‘A’ heat lamp (not included) into the lamp fixture.

**NOTE:** Model 2792 & 2793 use 2 – 250 watt maximum R-40, Type ‘A’ heat lamps.

### **Assembly of 2793 Unit**

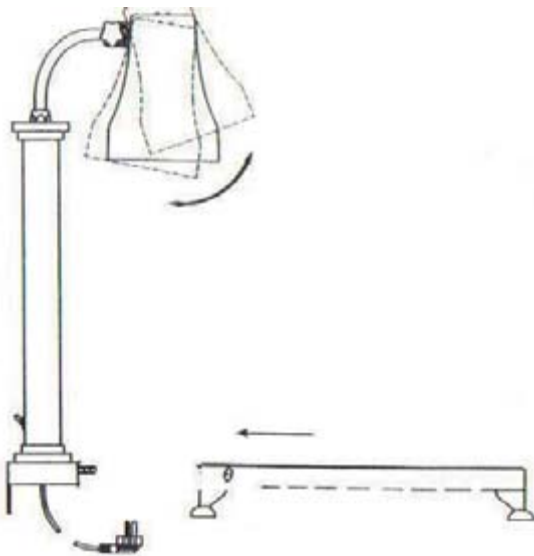

1. Install Double light heat lamp into carving table by placing the 2 bolts welded to lamp base into the double hole section, located in the center rear of the marble table base.
2. Secure and tighten the 2 round locking nuts by hand only. **DO NOT USE WRENCH.**



## *Use & Care Instructions*

***MAKE SURE POWER IS SWITCHED OFF BEFORE SERVICING UNIT.  
UNPLUG UNIT FROM POWER SOURCE.***

**CAUTION:** ALLOW LAMP(S) TO COOL BEFORE CLEANING THE UNIT OR REPLACING THE LAMPS.

1. **Cleaning the entire assembly:** Remove heat lamp(s). Use a mild detergent, such as dishwashing liquid. Use a sponge or cloth to wipe down unit. DO NOT IMMERSE UNIT IN WATER. Dry with a soft cloth. NEVER USE ANY ABRASIVE PADS OR SCOURING POWDERS. Completely dry lamp before installing.

**CAUTION:** ALLOW LAMP(S) TO DRY BEFORE REPLACING.

2. **Changing the Heat Lamps:** Disconnect power from the unit. Unscrew heat lamp(s) from holder and replace with 250 watt maximum, R-40, type 'A' heat lamp.